

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

## DANGER

To reduce the risk of electric shock:

1. Do not reach for a Trimmer that has fallen into water. Unplug immediately.
2. Use Trimmer only in dry condition. Do not use while bathing or in a shower.
3. Do not submerge Trimmer in water.
4. Do not place or store Trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
5. Always unplug this Trimmer from the electrical outlet immediately after using, except when Trimmer is (re)charging.
6. Unplug and remove power supply cord from Trimmer before cleaning.
7. When discarding Trimmer, unplug Trimmer before removing rechargeable battery. See Battery Removal instructions.
8. The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

## WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this Trimmer for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this Trimmer if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.
4. Trimmer can be rinsed under running tap water. Do not operate Trimmer until fully dried.
5. Keep the Trimmer, cord and any attachments away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not operate, charge or plug in Trimmer outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
8. Always check cutters, cutting unit and combs before using the Trimmer. Do not use the Trimmer if cutters, cutting unit or combs are damaged, as injury may occur.
9. Always attach plug to Trimmer first, then to outlet. To disconnect, turn on/off switch to "OFF" position, then remove plug from outlet.
10. To prevent possible damage to the cord, do not wrap cord around the Trimmer.
11. Never put Trimmer in direct sunlight or store at a temperature above 140°F.
12. This Trimmer is for use on human hair (beard, moustache and sideburns) only. Do not use this Trimmer for any other purpose.
13. Always store your Trimmer, attachments and power plug in a moisture-free area. Make sure the cord is disconnected from the Trimmer.
14. Only use the power plug and other accessories supplied with the appliance.
15. Caution-Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
16. To avoid all risks, point the laser beam away from your eyes and do not stare directly into the laser beam (fig. 1).

# SAVE THESE INSTRUCTIONS

**IMPORTANT:** The power plug contains a power plug to replace it with another plug as this will cause a hazardous condition.

**IMPORTANT:** The Label of 'Class 1 Laser product' is affixed on the rear enclosure of the product (fig. 2).


**IMPORTANT:** Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50. Dated June 24, 2007.

### Registration

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at [www.norelco.com/register](http://www.norelco.com/register)

### Features

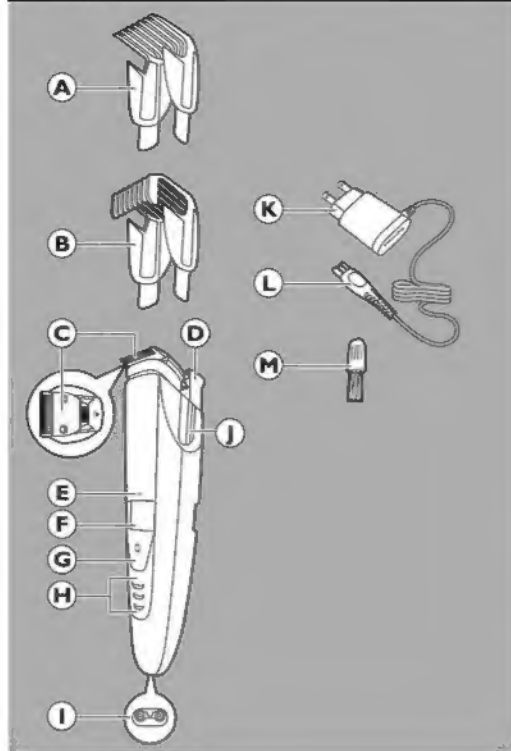

- A Detail Comb
  - B Beard Comb
  - C Dual-Sided Trimmer
  - D Laser Guide
  - E Length Setting Display
  - F Zoom Wheel
  - G On/Off Button
  - H Battery Lights
  - I Socket for Appliance Plug
  - J Trimming Comb Guiding Groove
  - K Adapter
  - L Appliance Plug
  - M Cleaning Brush
- Full Two-Year Warranty  
45-Day Money-Back Guarantee



This symbol indicates that the Trimmer can be rinsed under running tap water.



### Put It To The Test

Like many new products, your Philips Norelco Laser Guided Precision Beard Trimmer may take a little getting used to. If you are using an electric Trimmer for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Trimmer.

Your Trimmer features a unique laser guide which projects a line on your face so you can pre-align the Trimmer and create the exact look you want every time.

Throw your scissors away and put your new Trimmer to the test. We guarantee precise, professional results or Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

### Charging

Charge the Trimmer fully before you start using it for the first time or after a long period of non-use.

### Charge Indications

#### Low Battery

- ▶ When the battery is almost empty, the bottom battery light blinks orange (fig. 3).
- ▶ When you turn off the Trimmer, the bottom battery light continues to blink orange for a few seconds.
- ▶ The bottom battery light will blink orange more rapidly if the battery is empty and you press the ON/OFF button, turn the Zoom Wheel or activate the Laser Guide.

### Charging

- ▶ When you start charging, the bottom battery light blinks orange and white alternately (fig. 4).
- ▶ After approximately 3 minutes the bottom battery light blinks white only. The battery now has enough energy for one cordless trimming session (fig. 5).
- ▶ As charging continues, more lights start blinking showing the charge level of the battery.
- ▶ When the battery is fully charged, all battery lights light up white (fig. 6).

### To Charge/Recharge

- ▶ Charging, recharging, or using the Trimmer at temperatures below 40°F or higher than 95°F adversely affects lifespan of the battery.
- ▶ If the appliance is subjected to a major change in temperature, pressure or humidity, let the Trimmer acclimatize for 30 minutes before using.
- ▶ Continuously recharging Trimmer will reduce lifespan of battery.

1. Be certain Trimmer is OFF and Laser Guide is in the 'OFF' position.

2. Insert the appliance plug directly into the Trimmer (fig. 7) and plug the adaptor into any 120VAC outlet. Use only the cord provided.

- ▶ An adaptor plug may be necessary for cord usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for power outlet.

3. The Battery Lights will blink to indicate the Trimmer is charging.

- ▶ It will take approximately 1 hour to fully charge the Trimmer for a cordless trimming time of up to 60 minutes.

NOTE: After the Trimmer is fully charged and still connected to the outlet, the Battery Lights will remain lit for 30 minutes and then turn off.

4. Disconnect the cord and unplug from electrical outlet.

### Optimize the working life of the battery

- ▶ After the Trimmer has been charged for the first time, do not recharge the Trimmer between trimming sessions. Continue using it until the battery is completely empty.
- ▶ Do not charge for more than 24 hours.
- ▶ Do not keep cord permanently plugged in.
- ▶ Discharge/run down the battery completely twice a year by letting the motor run until it stops.
- ▶ If the Trimmer hasn't been used for a long period of time, it must be recharged for one full hour.

### Corded Trimming

- ▶ Trimmer does not recharge during corded trimming.

1. Connect cord provided to Trimmer and plug Trimmer into electrical outlet.

2. Press the ON/OFF button to begin trimming (fig. 8).

3. Turn Trimmer OFF and unplug.

### Cordless Trimming

1. Charge according to directions. Unplug Trimmer from outlet and remove cord.

2. Press the ON/OFF button to begin trimming.

3. If the charge runs low while trimming, the Battery Light will blink orange.

4. If the charge runs out while trimming, simply connect cord provided to Trimmer and outlet to continue trimming.

5. Turn Trimmer OFF and unplug.

### Trimming

- ▶ Use this Trimmer for its intended household use as described in this manual.
- ▶ Trimming is easier when skin and hair are dry.
- ▶ Always comb the beard and/or moustache with a fine comb before you start trimming.
- ▶ If you are trimming for the first time, be careful. Do not move the Trimmer too fast. Make smooth and gentle movements.

### Trimming with the Detail and Beard Combs

- ▶ Use the Beard Comb to trim your beard (fig. 9) or use the Detail Comb to trim hard-to-reach areas, such as under your nose (fig. 10).
- ▶ A Comb must be on Trimmer to use the Zoom Wheel.

1. Slide a comb into the guiding grooves on both sides of the Trimmer. You will hear a 'click' (fig. 11).  
The comb will not fit onto the Trimmer when the Detail Trimmer is pointing towards the front of the Trimmer. Turn the trimming head and then slide the comb onto the appliance (fig. 14).

2. Turn the Zoom Wheel to the desired trimming length setting. The setting selected lights up on the display (fig. 12).

- ▶ You can select a length from 1/64 in/0.4mm to 9/32 in/7mm.

- ▶ If you are trimming for the first time, start by using the comb at the maximum trimming length setting (9/32 in/7mm) to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Zoom Wheel to desired trimming length. Zoom Wheel will "click" into position at each setting.

3. Press the ON/OFF button to turn Trimmer ON (fig. 8).

4. To trim in the most effective way, move the Trimmer against the direction of hair growth. Make sure the surface of the comb always stays in contact with the skin.

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

5. If cut hairs have accumulated in the comb, turn Trimmer off, remove the comb and blow and/or shake the hair out of the comb. The selected trimming length setting will not change when you do this.

### Trimming Without a Comb

Remove comb if you are:

- ▶ Defining hair lines
- ▶ Trimming nape of neck
- ▶ Removing single, unwanted hairs

1. Be certain Trimmer is in the OFF position.

2. Remove any comb by pulling it off the Trimmer (fig. 13).

Never pull at the flexible top of the comb. Always pull at the sides.

3. Turn the dual-sided trimming head to the desired position (fig. 14).

– Use the Detail Trimmer (0.6 in./15mm) for more precise styling and contouring.

4. Press the ON/OFF button to turn Trimmer ON (fig. 8).

**5** Make well-controlled movements. Touch the hair lightly with the Trimmer.

*TIP: For a comfortable trim close to your skin, place the flat side of the trimming head against your skin and make strokes in the desired direction.*

**Trimming with the Laser Guide**

- ▶ Use the Laser Guide to define edges of your beard, sideburns and moustache, for example.
- ▶ The Laser Guide can be used with both sides of the trimming head.
- ▶ Only turn the dual-sided trimming head when the Laser Guide is popped down so as not to damage the Laser Guide.

**1** Remove any comb by pulling it off the Trimmer (fig. 13).  
Never pull at the flexible top of the comb. Always pull at the sides.

NOTE: The Laser Guide can only be used when trimming without a comb.

**2** Press the ON/OFF button to turn Trimmer ON (fig. 8).

**3** Press the top of the Laser Guide to turn on the laser (fig. 15).  
The Laser Guide pops up and the light will shine over the top of the trimming head.

NOTE: Make sure you push the Laser Guide down before turning the Dual-Sided Trimmer to avoid damaging the Laser Guide.

**4** Define the edges of your beard using the Laser Guide trimming line as a guide (fig.16).

*TIP: Hold the Trimmer so that the laser light shines exactly on the edge you want to trim and then place the trimming head on your skin. After trimming, use the Laser Guide to check if the contours of your beard are symmetrical or straight.*

**5** Press the ON/OFF button to turn OFF Trimmer (fig. 8).  
The Laser Guide will switch off automatically after 3 minutes.

**6** Push down the top of the Laser Guide to lock into 'OFF' position (fig. 17).

**Cleaning**

- ▶ Clean the Trimmer after each use.
- ▶ Always switch Trimmer OFF, unplug and remove power supply cord from Trimmer before cleaning.
- ▶ Do not use abrasive cleaning agents, scourers, compressed air or aggressive liquids such as alcohol, gasoline or acetone to clean the Trimmer and attachments.
- ▶ Never clean, replace or remove Trimmer combs with motor ON.
- ▶ Do not apply pressure to cutters.
- ▶ Do not touch cutters with hard objects as this may damage them.
- ▶ Use a soft, dry cloth to clean Trimmer handle.

**During Use:**

- ▶ If cut hairs have accumulated in a comb, turn Trimmer off, pull the comb off Trimmer and remove hairs by shaking and/or blowing or using the cleaning brush provided.

**After Each Use:**

- 1** Make sure the Trimmer is switched OFF and the Laser Guide is in the 'OFF' position. Disconnect Trimmer from the electrical outlet.
- 2** Remove any comb and rinse under warm tap water (fig. 18) or clean with the supplied brush.
- 3** Clean the trimming head under warm tap water (fig. 19) or use the brush supplied.
- 4** Allow Trimmer to air dry thoroughly with the Laser Guide popped out.

NOTE: The Trimmer does not need any lubrication (oil).

**Cleaning Trimming Head Connector**

- ▶ Clean the Trimming Head Connector every 3 months.

**1** Make sure the Trimmer is switched OFF and the Laser Guide is in the 'OFF' position. Disconnect Trimmer from the electrical outlet.

**2** Remove any comb (fig. 13).

**3** Pull trimming head off of the Trimmer (fig. 20).

**4** Clean trimming head connector with the supplied brush (fig. 21).

**5** Clean inside of trimming head with the supplied brush (fig. 22).

**6** Press trimming head back on Trimmer.

This Trimmer has no other user-serviceable parts. For assistance call 1-800-243-3050.

**Assistance**

For assistance, visit our website:

**www.philips.com/support**  
**or call toll free 1-800-243-3050**

Online information is available 24 hours a day, 7 days a week.

**Storage**

- ▶ Be sure Trimmer is turned OFF. Remove cord from outlet and Trimmer before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap cord around Trimmer when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not place or store Trimmer where it can fall or be pulled into a tub or sink, water or other liquid.

**Battery Removal**

- ▶ This Philips Norelco Trimmer contains a rechargeable Lithium-Ion battery which must be disposed of properly (fig. 23).
- ▶ Battery may only be removed when Trimmer is to be discarded.
- ▶ For assistance, visit our website, [www.philips.com/support](http://www.philips.com/support) or call toll free 1-800-243-3050.

**1** Unplug electrical cord from outlet and Trimmer before dismantling Trimmer.

**2** Allow Trimmer to run until the battery is empty/depleted.

**3** Turn Trimmer OFF and remove comb and cutting unit from Trimmer.

**4** Remove any screws in the back or front of the Trimmer.

**5** Remove the back and/or back panel with a screwdriver.

**6** If necessary, remove any additional screws and/or parts until you see the printed circuit board with the rechargeable battery.

**7** If necessary, cut the wires to separate the printed circuit board and the rechargeable battery from the appliance.

Be careful, the battery strips and housing parts are very sharp.

**8** Do not attempt to replace batteries. Insulate battery ends by covering with tape and/or place batteries in a small plastic bag.

**9** Discard your Trimmer. Do not attempt to plug electrical cord into the outlet or recharge the Trimmer after the batteries have been removed.

**10** Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or [www.rbrcc.com](http://www.rbrcc.com) for battery drop-off locations.



**Laser Guided Beard Trimmer**



**BT9295**

Rechargeable  
Cordless/Cord



**Always here to help you**

Register your product and get support at [www.norelco.com/register](http://www.norelco.com/register)



4222 002 8468 2

**Full Two-Year Warranty**

Philips Electronics North America Corporation warrants each new Philips Norelco product, Model BT9295 (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

**IMPORTANT:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.\* Use of unauthorized replacement parts will void this warranty.

**PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE.**

**NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

In order to obtain warranty service, simply go to [www.philips.com/norelco](http://www.philips.com/norelco) or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

\*Read enclosed instructions carefully.

Manufactured for:  
Philips Consumer Lifestyle  
A Division of Philips Electronics North America Corporation  
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips N.V.

© 2014 Philips Electronics North America Corporation. All Rights Reserved.



**45-DAY MONEY-BACK GUARANTEE**

If you are not fully satisfied with your Philips Norelco Trimmer send the product back and we'll refund you the full purchase price.

**The Trimmer must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.**

**The Trimmer must be postmarked no later than 45 days after the date of purchase. Philips Norelco reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.**

**To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance.**

Delivery of refund check will occur 6-8 weeks AFTER receipt of returned product.